


**PRODUCT DATA SHEET  
FR-638RT**

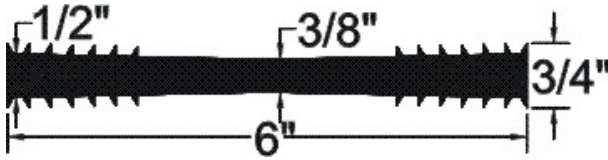

Head of Pressure	Pounds per Lineal Foot
125'	1.70

**WHERE TO USE FLAT RIBBED WATERSTOP**

Flat Ribbed waterstops are used in construction joints where little to no movement is anticipated and where high bond strength is desired.

<b>PHYSICAL PROPERTIES OF PVC WATERSTOP</b> Meets or Exceeds CRD C-572 and Bureau of Reclamation Made of Raw Virgin Material with no pigments		
Typical Properties	ASTM Method	Minimum Value
Water Absorption	D-570	0.15%
Tear Resistance, lb/in (kg/cm)	D-624	300 (53.5)
Specific Gravity, (+/-0.05)	D-792	1.38
Hardness, Shore A (+/-5, 10 sec. delay)	D-2240	80
Tensile, psi (kg/cm <sup>2</sup> )	D-638, Type IV	2000 (140.61)
Elongation %	D-638, Type IV	350
100% Modulus, psi (kg/cm <sup>2</sup> )	D-638, Type IV	725 (50.75)
Brittle Point (Tb)	D-746	-35° F / -37° C (Passed)
Stiffness in Flexure psi (kg/cm <sup>2</sup> )	D-747	600 (42.18)
Ozone Resistance	D-1149	No Failure
<b>Accelerated Extraction, CRD-C572</b>		
Tensile, psi (kg/cm <sup>2</sup> )	D-638, Type IV	1600 (112.49)
Elongation, %	D-638, Type IV	300
<b>Effect of Alkali, CRD-C572</b>		
Weight Change, %	-----	-0/+0.25
Change in Hardness, Shore A	D-2240	+/-5

**INSTALLATION**

**Preparation**

During progress of work all waterstop shall be protected from damage and should be free of oil, dirt and concrete spatter. Waterstop coils should be uncoiled several days before installation to insure ease of installation and fabrication. Be sure steel reinforcing bars do not interfere with proper positioning of waterstop.

**Placement**

The location and embedment of the waterstop shall be as shown on the drawings, with approximately one-half of the width of the waterstop embedded in the concrete on each side of the joint. All waterstops shall be sufficiently held in place to insure that they are correctly positioned to form a continuous watertight diaphragm in the joint unless otherwise shown. The method used to fasten the waterstop may be as follows:

- extending through a slot in the keyway
- held in place by split bulkheads
- hog ring and wire tie to reinforcing bars every 12 inches. Always secure hog ring or wire at edges of waterstop. Hog ring shall not penetrate the waterstop.

Care should be taken during concrete placement on horizontal sections to prevent excessive movement of the waterstop to insure against displacement. Always thoroughly and systematically vibrate concrete around the waterstop to avoid air entrapment and to provide a positive contact between the waterstop and the concrete. On the second pour, sweep horizontal joints to insure there is no foreign matter to interfere with positive contact between the waterstop and the concrete.

**Splicing**

Waterstops may need splicing at intersections, abrupt changes of direction, or to form longer lengths. Field splicing of straight butt joints is fairly simple. Mitered fittings such as ells, tees and crosses in both flat and vertical styles, are harder to splice correctly. We recommend that these types of fittings be factory fabricated. Please contact us for more details.

141 Hammond Street Carrollton, GA 30117  Phone 770-832-2000 ■ 800-862-4835 ■ FAX 770-832-2095 Visit our website @ <a href="http://www.bometals.com">www.bometals.com</a> Address email to <a href="mailto:info@bometals.com">info@bometals.com</a>  <i>Founded in 1989, BoMetals has become an industry leader in the design and manufacture of concrete and masonry accessories.</i>
--