


PRODUCT DATA SHEET
RF-4316

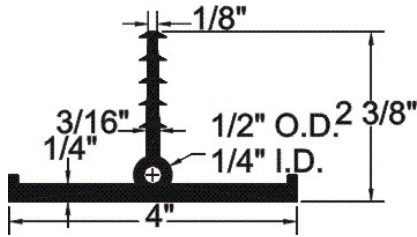

Head of Pressure	Pounds per Lineal Foot
N/A	0.89

WHERE TO USE RETRO FIT WATERSTOP

Retro Fit waterstops are used to provide a watertight seal when attaching a new construction to an existing one.

PHYSICAL PROPERTIES OF PVC WATERSTOP Meets or Exceeds CRD C-572 and Bureau of Reclamation Made of Raw Virgin Material with no pigments		
Typical Properties	ASTM Method	Minimum Value
Water Absorption	D-570	0.15%
Tear Resistance, lb/in (kg/cm)	D-624	300 (53.5)
Specific Gravity, (+/-0.05)	D-792	1.38
Hardness, Shore A (+/-5, 10 sec. delay)	D-2240	80
Tensile, psi (kg/cm ²)	D-638, Type IV	2000 (140.61)
Elongation %	D-638, Type IV	350
100% Modulus, psi (kg/cm ²)	D-638, Type IV	725 (50.75)
Brittle Point (Tb)	D-746	-35° F / -37° C (Passed)
Stiffness in Flexure psi (kg/cm ²)	D-747	600 (42.18)
Ozone Resistance	D-1149	No Failure
Accelerated Extraction, CRD-C572		
Tensile, psi (kg/cm ²)	D-638, Type IV	1600 (112.49)
Elongation, %	D-638, Type IV	300
Effect of Alkali, CRD-C572		
Weight Change, %	-----	-0/+0.25
Change in Hardness, Shore A	D-2240	+/-5

INSTALLATION

Preparation

During progress of work all waterstop shall be protected from damage and should be free of oil, dirt and concrete spatter. Be sure steel reinforcing bars do not interfere with proper positioning of waterstop.

Location & Placement of Retro Fit

First, the existing concrete surface that will become a joint should be located by use of the construction drawings for the project. The existing concrete surface should be cleaned (sand blasted or grinded) to make sure the epoxy can have the best adhesion and seal. Then apply a layer of epoxy to the existing concrete surface that is little wider than the base of the Retro Fit on both sides. The epoxy should be approximately 1/8" thick. Apply the epoxy per epoxy instructions. Before the epoxy cures, secure the Retro Fit with stainless steel batten bar and anchors. When securing the Retro Fit with stainless steel batten bar and anchors, if it is a two batten bar system, it is important that they only be secured one side at a time to be able to position the Retro Fit to eliminate voids and/or air pockets.

Placement of Concrete

Care should be taken during concrete placement to prevent excessive movement of the waterstop to insure against displacement. Always thoroughly and systematically vibrate concrete around the waterstop to avoid air entrapment and to provide a positive contact between the Retro Fit & concrete.

Splicing

Waterstops may need splicing at intersections, abrupt changes of direction, or to form longer lengths. Field splicing of straight butt joints is fairly simple. Mitered fittings such as ells, tees and crosses in both flat and vertical styles, are harder to splice correctly. We recommend that these types of fittings be factory fabricated. Please contact us for more details.

Accessories

- 3/16" x 1 1/4" x 119 1/2" Stainless Steel Batten Bar
- 2 1/4" x 1/4" Stainless Steel Anchors
- BoMetals Retro Fit Epoxy

141 Hammond Street
Carrollton, GA 30117

Phone 770-832-2000 ■ 800-862-4835 ■ FAX 770-832-2095
Visit our website @ www.bometals.com
Address email to info@bometals.com

Founded in 1989, BoMetals has become an industry leader in the design and manufacture of concrete and masonry accessories.